


# Carlin Air Boot Quick Guide

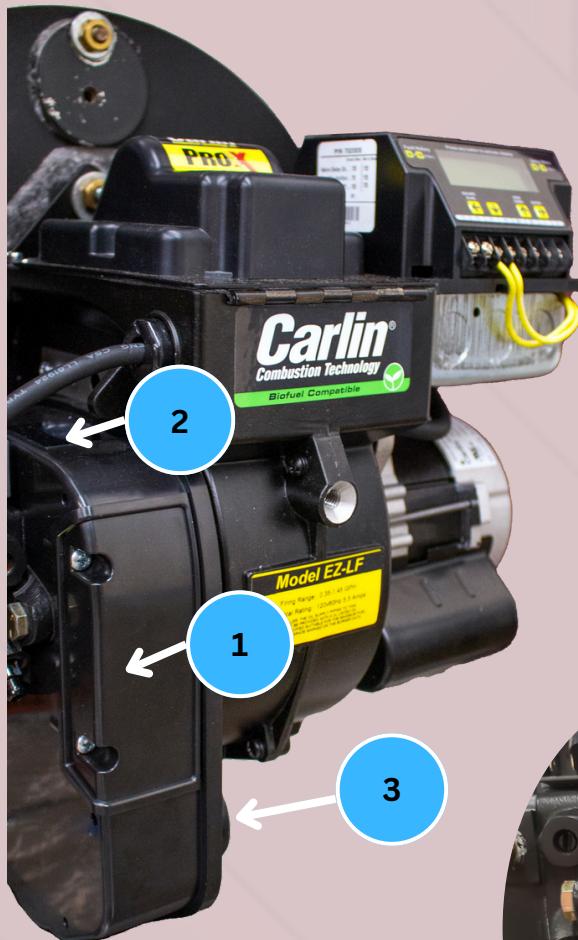

**SCAN THE QR CODE**  
FOR PRODUCT VIDEO,  
LITERATURE AND MORE!

**CARLIN BURNERS ARE FACTORY SET.** However you must use a **combustion analyzer** to verify that the burner is properly set up per the appliance manufacturer's listed settings.

## TO ADJUST THE AIR SETTING:

1. Remove the air band access cover. 
2. Loosen the lock screw and move the air band to achieve the desired CO2 setting.  *Consult the appliance manufacturer's literature included with this unit for proper settings.*
3. Tighten the air band lock screw.
4. Replace the air band access cover and **use a combustion analyzer to verify that the burner is properly set up per the appliance manufacturer's listed settings.**



**1** Air Band Access Cover  
(Removed)




**2** Air Setting Window



**3** Air Inlet

# OFC Fan Timer Control

## Quick Guide

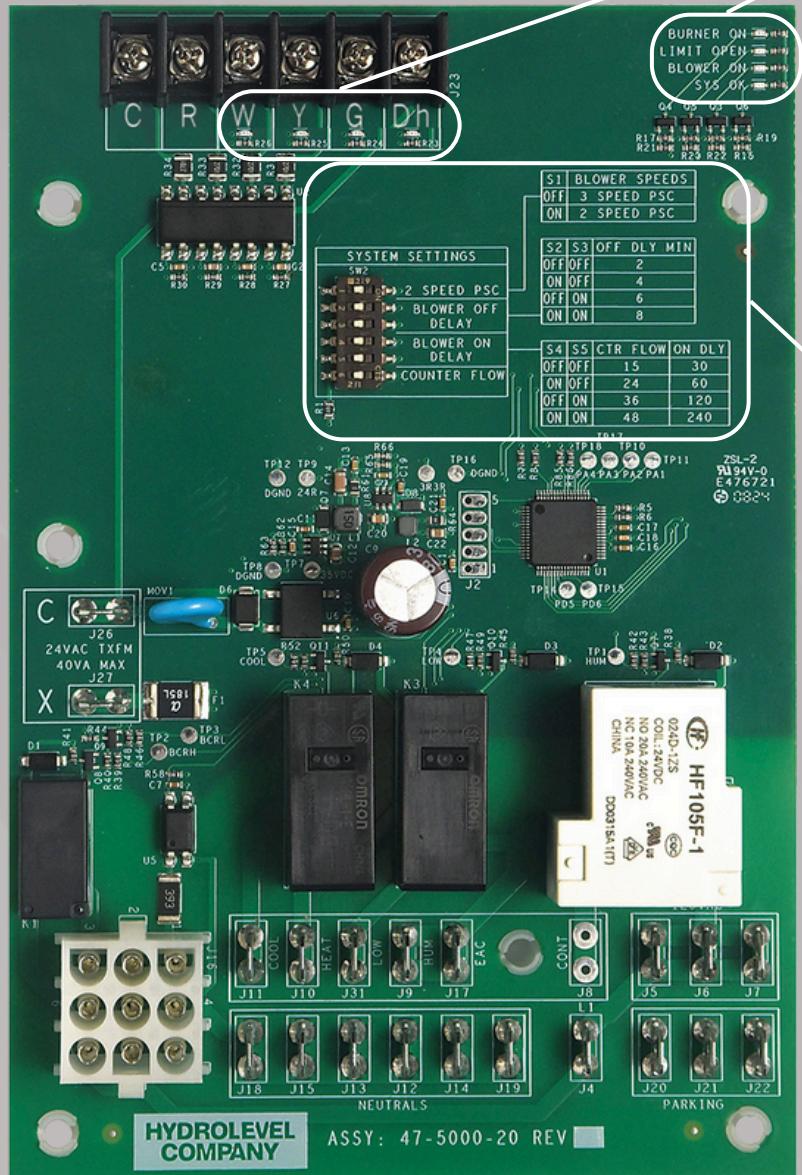

## Operational LEDs

- **W, Y, G, Dh (Thermostat Terminals)**  
When lit, indicates thermostat has sent a signal to the specified terminal
- **BURNER ON (Solid)**  
Controller has sent a signal to the burner to run
- **LIMIT OPEN (Flashing)**  
Normally closed furnace limit circuit is open
- **BLOWER ON (Solid)**  
Controller has energized the blower motor
- **SYS OK**
  - **Flashing** - The control has passed all internal self-checks and is operational
  - **Solid** - The control has failed a self-check and will not function
  - **Off** - Indicates a problem in the 24VAC circuit.

SYSTEM SETTINGS	
SW2	
OFF	2 SPEED PSC
ON	3 SPEED PSC
S2	S3 OFF DLY MIN
OFF	2
ON	4
OFF	6
ON	8
S4	S5 CTR FLOW ON DLY
OFF OFF	15 30
ON OFF	24 60
OFF ON	36 120
ON ON	48 240
COUNTER FLOW	

S1	BLOWER SPEEDS		
OFF	3 SPEED PSC		
ON	2 SPEED PSC		
S2	S3	OFF DLY MIN	
OFF	OFF	2	
ON	OFF	4	
OFF	ON	6	
ON	ON	8	

S4	S5	CTR FLOW	ON DELAY
OFF	OFF	15	30
ON	OFF	24	60
OFF	ON	36	120
ON	ON	48	240

S6	CTR FLOW ON/OFF
OFF	CTR FLOW OFF
ON	CTR FLOW ON



SCAN THE QR CODE  
FOR PRODUCT VIDEO,  
LITERATURE AND MORE!

**HYDROLEVEL**  
**COMPANY**