



## MODEL 3200-Plus

### Temp Limit / LWCO Control with Thermal Targeting™ for Water Boilers

120 VAC Operating Voltage  
24VAC Burner Circuit

PATENT NO. 8,931,708; 8,844,834;  
7,891,572; others pending

#### Special attention flags

Please pay particular attention to the following when you see them throughout this manual.

**DANGER** Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**NOTICE** Intended to bring special attention to information and practices, but not related to physical injury

#### NOTICE

**SERVICE TECHNICIANS** Prior to installation or servicing, please read all contents of this manual to ensure proper operation and safety standards are met.

# INSTALLATION INSTRUCTIONS and OPERATING MANUAL

- **Saves Fuel** – Features Thermal Targeting™ technology and Thermal Pre-Purge capability
- **Outdoor Reset Ready** – Provides Outdoor Reset and Warm Weather Shut-Down capability with the addition of Hydrolevel OS-100 Outdoor Sensor Kit (sold separately)
- **Universal Design** – Replaces common cold-start and triple-action Aquastats\*
- **Operating Indicators** – LEDs, Dynamic Display and Test Button provide continual and on-demand status checks
- **Prioritizes Domestic Hot Water** – Gives priority to low limit setting or to calls from indirect water heater
- **Reduces Condensation** – Holds circulator off until boiler reaches 125°F

\*Aquastat is a registered trademark of Honeywell International, Inc.

## Three Function Design

### Temperature Limit Control

Designed for cold start and tankless coil boilers.

### Low Water Cut-Off

Provides protection against potentially dangerous low water conditions when installed with the Hydrolevel Electro-Well™ (see page 2 for details).

### Boiler Reset Control

- Thermal Targeting – On-board micro-processor adjusts boiler temperature based on heating demand.
- Outdoor Reset Ready – Compatible with Hydrolevel Outdoor Sensor Kits



### WARNING

To reduce the risk of Fire, CO Poisoning, Smoke Asphyxiation and Electrical Hazard, this product, including this instruction manual, must be installed, serviced or adjusted only by a qualified service technician. Failure to comply with this and other requirements in this manual could result in severe personal injury, death or substantial property damage.

**Electrical shock hazard:** To prevent equipment damage, severe personal injury, or death, disconnect power supply before installing or servicing control.

**Burn hazard:** To prevent serious burns, boiler should be thoroughly cooled before installing or servicing the control.

### CAUTION

Protect the control from water exposure during and after installation. Do not install where water can flood or drip on the control or where condensation can form on the circuit board. Replace the control if the circuit board was exposed to water. If the circuit board on this unit gets wet, the control can malfunction causing the boiler to overheat, resulting in severe personal injury or death from fire or explosion.

### NOTICE

**Frozen pipes/water damage.** Central heating systems are prone to shut down as a result of power or fuel outages, safety related fault conditions or equipment failure. Installation of freeze protection monitoring or similar precautions are recommended for unattended dwellings in climates subject to sustained below-freezing temperatures. Failure to do so can cause frozen pipes which will result in severe property damage including burst pipes and substantial water leaks.



126 Bailey Road, North Haven, CT 06473 • Phone (203) 776-0473 • [www.hydrolevel.com](http://www.hydrolevel.com)

## IMMERSION WELLS

Fuel Smart HydroStat can be installed on a Hydrolevel Electro-Well™ or on an existing immersion well already in the boiler. **IMPORTANT:** The control will only provide low water cut-off protection when installed on an Electro-Well™.


### Installing HydroStat with Hydrolevel Electro-Well™

The Electro-Well can be identified by the black electrical insulator or, if installed, by the groove cut into the hexnut.

Fuel Smart HydroStat Control



Hydrolevel Electro-Well™

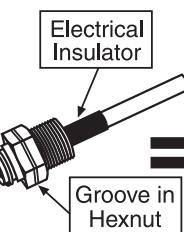

**PROVIDES TEMPERATURE, ECONOMY AND LOW WATER CUT-OFF FUNCTIONALITY**

When installed on an Electro-Well™ (sold separately), the Low Water Cut-Off function is automatically activated. Heat transfer grease should not be used. **NOTE:** For proper operation, there must be 1/2" clearance between the copper well tube and any surface within the boiler.


**See Electro-Well™ models on page 15.**

### Installing HydroStat with Standard Immersion Well

Fuel Smart HydroStat Control



Standard Immersion Well

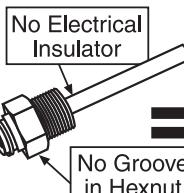

**PROVIDES TEMPERATURE, AND ECONOMY FUNCTIONALITY ONLY**

**NOTE:** When installed on a standard immersion well, the "LWCO Active" LED will not illuminate.

## MOUNTING THE CONTROL

### WARNING

**Electro-Well™ installation.** Make sure the immersion well or Electro-Well™ is installed in the boiler manufacturer's designated temperature limit control tapping and that the sensor is fully inserted into the well to ensure proper temperature sensing. Failure to follow these instructions could result in boiler overheating, creating a risk of severe injury or death from burns, scalding, or fire.

### NOTICE

**Teflon Tape:** When installing an Electro-Well™, do not use Teflon tape. Use of Teflon tape can interfere with low water cut-off operation and may cause nuisance lockouts. Pipe sealing compound should be used.

**Removable Cover:** For convenience, the HydroStat cover can be removed for easier access when installing/servicing. To remove, open the front cover 90 degrees, then lift. Reverse these steps to re-install the cover.

**STEP 1** Two mounting positions are available on the back of the control (Fig. 1). Select which of the two positions (2 knockouts) is best for the location of the control. Remove the knockout.

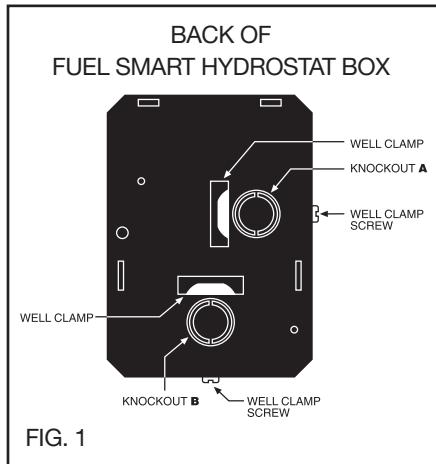


FIG. 1

**STEP 2** Place control on the well. While holding box against well nut, tighten well clamp screw. (Fig. 2)

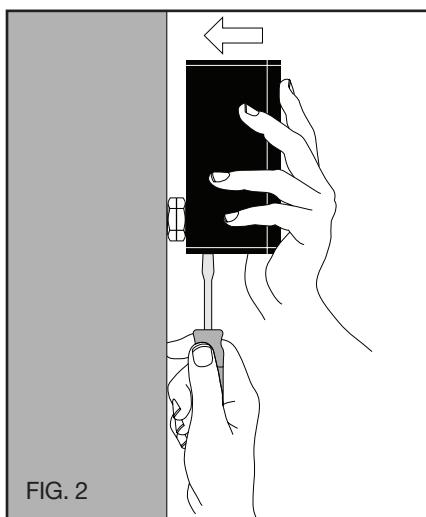


FIG. 2

**STEP 3** Insert sensor **ALL THE WAY** into well through the knockout (A or B) you have chosen. (Fig. 3)



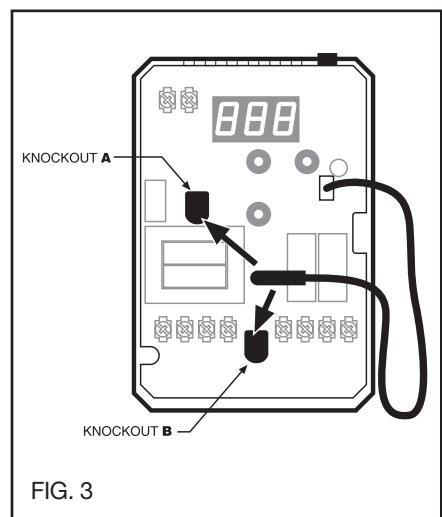


FIG. 3

**IMPORTANT – Sensor must be inserted all the way into the well for proper operation.**

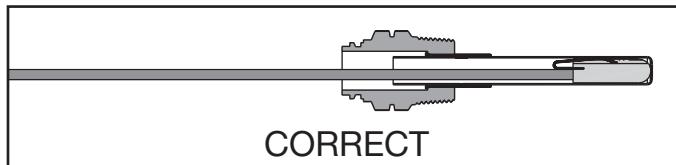

CORRECT

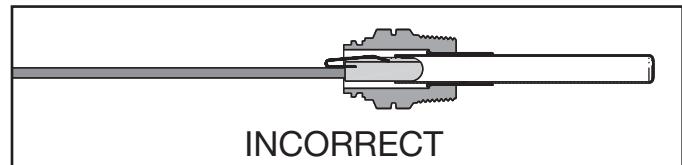

INCORRECT

## REMOTE MOUNTING


When not mounted on the well, the Fuel Smart HydroStat can be installed on a flat surface and fitted with a longer sensor (sold separately – see below). First, drive the top screw into the mounting surface. Hang the control on this screw using the top keyhole slot on the back of the HydroStat. Then secure the control with two additional screws through the mounting holes at the bottom.

**NOTE:** The HydroStat ships standard with a 12" sensor. Additional lengths are available separately including 24", 36", 48", 60", 10', 20'.

Remote Mounting Kits are also available for legacy jobs. Each kit includes mounting hardware and a remote sensor.

**GROUNDING:** When using Remote Mounting Kits, ensure your incoming voltage ground wire is connected to the HydroStat's ground screw (see "GROUNDING" section on the top of next page)

**Hydrostat (Back View)**  
Mounting Locations for zip screw mounting

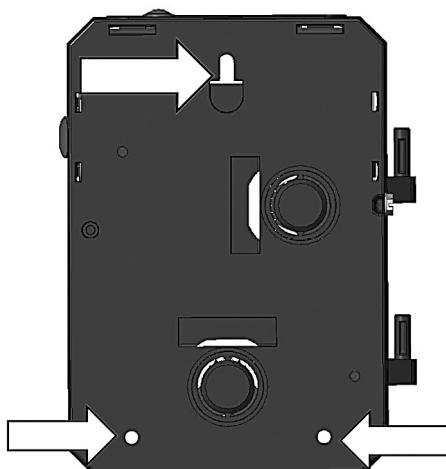

## WIRING

### WARNING

**Electrical shock hazard.** To prevent electrical shock, death or equipment damage, disconnect power supply before installing or servicing this control.

### GROUNDING

Improper grounding of the control may result in ignition noise interference or nuisance low-water lockouts. To ensure proper operation, connect the ground wire from the electrical panel to the HydroStat's ground plate screw located at the bottom of the control (see Fig. 1). For installations where grounding is provided through metal conduit, install the optional conduit ground insert plate (Part No. 51088, not included with all models). Attach the green wire from the insert plate to the HydroStat's ground plate screw (see Fig. 2).

**NOTE:** If a direct equipment ground cannot be established, connect the ground plate screw to a reliable earth ground in accordance with local electrical codes.

### NOTICE

When the HydroStat 3200 is mounted remotely and not installed on the ElectroWell™ (immersion well), it may be necessary to add a wire from the HydroStat ground plate screw to the ElectroWell and secure it with a clamp.

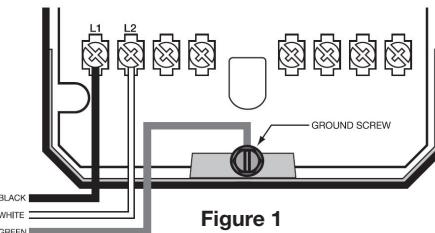


Figure 1



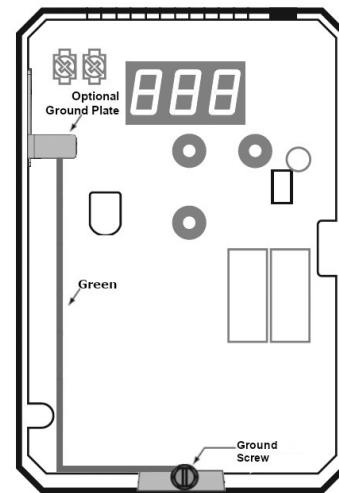


Figure 2

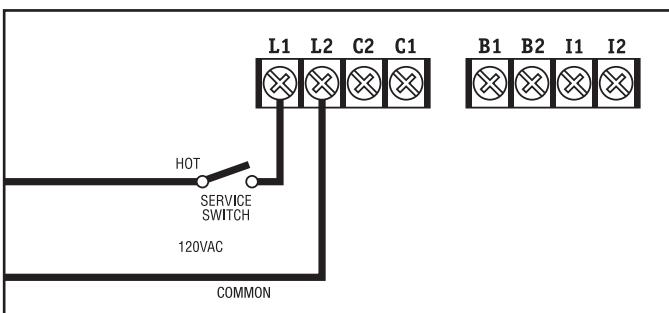


### STEP 1

Connect 120 VAC Hot to terminal L1. Connect 120 VAC Common to terminal L2. Disconnect means and overload protection as required (provided by others).

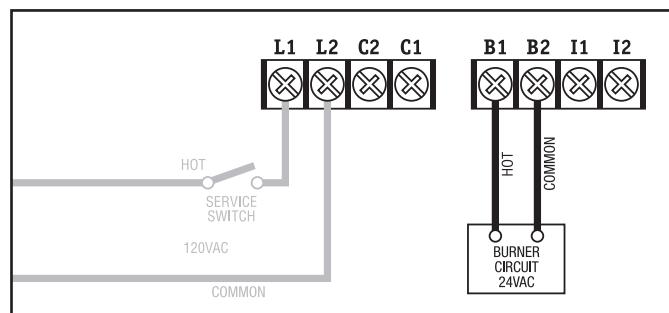


### STEP 2

Connect the burner circuit to B1-B2. (B2 is common.)

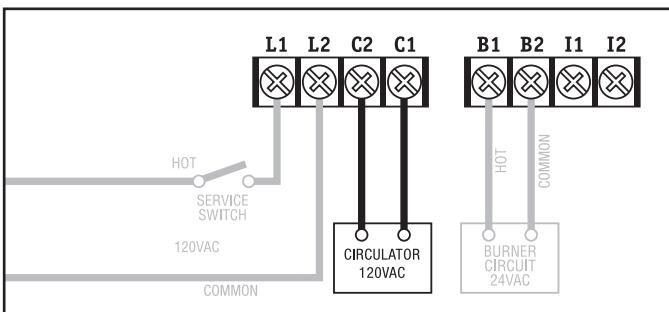

### STEP 3

Connect the circulator to C1-C2. (C2 is common.)

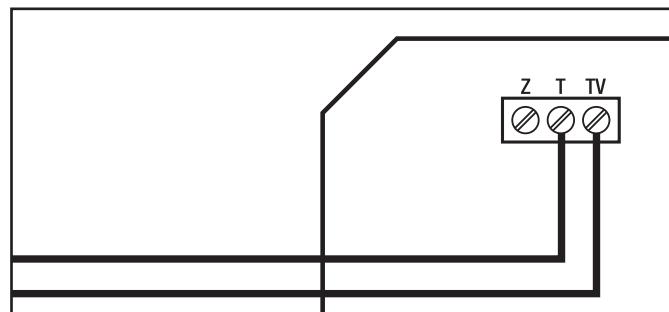

### STEP 4

Connect the thermostat to T/TV.

## WIRING

### ⚠️ WARNING



**Electrical shock hazard.** To prevent electrical shock, death or equipment damage, disconnect power supply before installing or servicing this control.

### STEP 5

If the boiler is equipped with a plug-in style vent damper, unplug the factory installed jumper from the receptacle on the circuit board and replace it with the vent damper plug.

### ⚠️ DANGER

**Carbon Monoxide Hazard:** The flue as well as the vent damper must be plugged in and checked for proper operation before allowing the system to operate. If the burner fires when the vent damper is not fully opened or there is any other blockage in the flue, dangerous flue products, such as carbon monoxide, will escape into the living space causing severe personal injury or death.

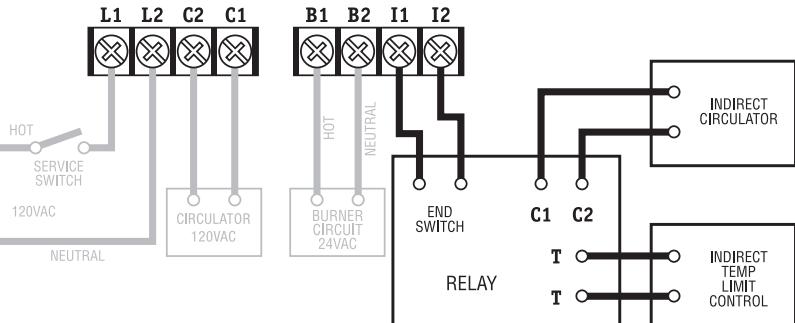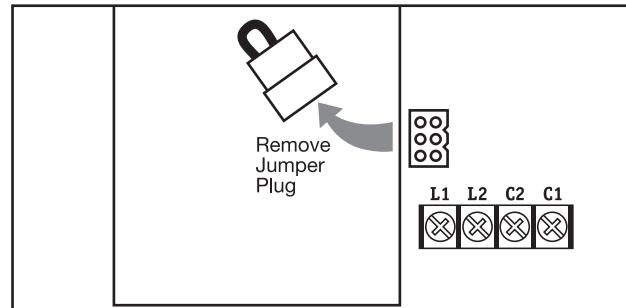


### STEP 6 For Systems with Indirect Water Heaters

When installing with an indirect water heater, the signal from the indirect must be separated from the heating zone signals and wired to I1 and I2 as shown above. Calls to I1 and I2 will bypass the Thermal Targeting or Outdoor Reset feature and allow the boiler to fire to the high limit setting to heat the indirect tank.


**NOTE:** If you choose not to separate the indirect signal from the heating zones, the Economy Feature should be turned OFF to insure that the boiler supplies adequate temperature to heat the indirect tank (see page 6).

### ZONE VALVE WIRING

**IMPORTANT:** Use a separate transformer to power zone valves. Connecting zone valves to Z-TV may overload the HydroStat and cause a lock-out condition (see Troubleshooting on page 12 for more information). The total load, including the burner circuit, vent damper, and Z-TV connections must not exceed 1.2 amps (30 VA). Connect zone valve end-switch to T/TV as shown below.

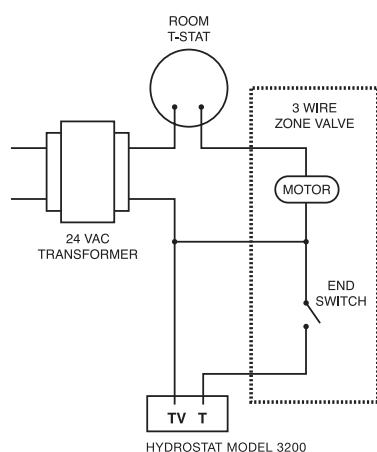


3 WIRE ZONE VALVE

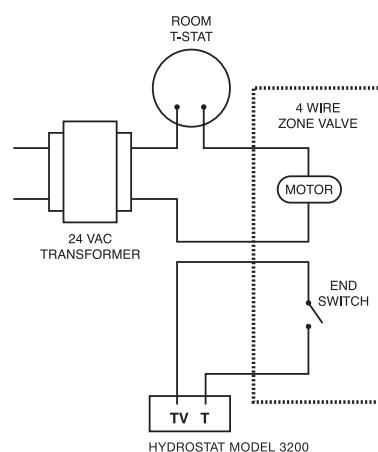

4 WIRE ZONE VALVE

## SETTING THE CONTROL

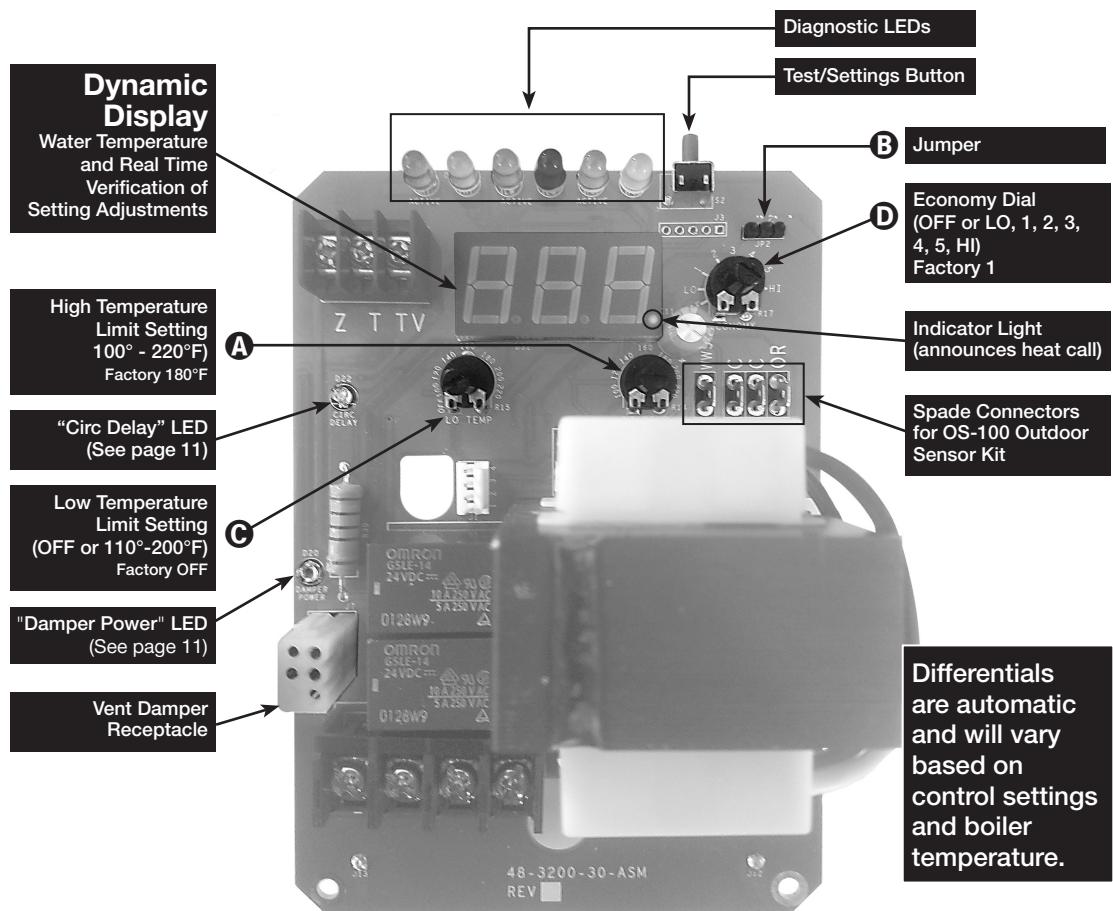

**NOTE:** Settings can be checked using the TEST/SETTINGS Button. See page 11 for details.

### Setting the High Limit

The high limit is factory set at 190°F. To adjust, turn the HI TEMP Dial **A** until the desired setting is displayed. (Setting range: 100°-220°F)

### Setting the Low Limit

The low limit will maintain temperature in the boiler and should only be used for boilers with tankless coils. The low limit is factory set to **OFF**. Prior to adjusting, remove the jumper (not equipped on all units) **B**. Then turn the LOW TEMP Dial **C** clockwise until the desired temperature is displayed. For proper operation, the low temperature limit setting should be at least 10° below the high limit setting.

#### IMPORTANT:

- If the display reads **OFF** when the Low Limit dial is adjusted, the dial functionality has been turned off in the Program Options. See page 9 for instructions on reactivating the dial.
- If Low Limit temperature cannot be set above 140°F, remove jumper **B**.

### Setting the Economy Feature

The Economy Feature is factory set for a 1 zone heating system. To adjust, turn the ECONOMY Dial **D** until the number displayed equals the number of heating zones. **Do not include indirect water heaters in the number of heating zones.** The Economy Feature conserves fuel by reducing

boiler temperature (see "How Thermal Targeting Works" on page 7). If the heating system is unable to supply needed heat to the house, the ECONOMY Dial should be turned to a lower setting (example: In a three zone house, turn the dial to 2 or 1). Conversely, if the boiler provides adequate heat, added fuel savings can be achieved by selecting a higher setting (example: 4 or 5). If the heating and indirect water heater signals were not separated when wiring the control, the Economy Feature should be turned **OFF** to ensure the boiler supplies adequate temperature to heat the indirect tank.

#### SETTING

|            |  |
|------------|--|
| <b>OFF</b> | Disables economy function. Will allow boiler to fire until hi-limit temp is reached and re-fire with a 10° subtractive differential. |
| <b>LO</b>  | Provides lowest level of fuel savings. Use this setting only if the house does not stay warm at higher settings.                     |
| <b>1</b>   | Recommended setting for single zone systems  |
| <b>2</b>   | Recommended setting for Two zone systems   |
| <b>3</b>   | Recommended setting for Three zone systems   |
| <b>4</b>   | Recommended setting for Four zone systems  |
| <b>5</b>   | Recommended setting for Five zone systems  |
| <b>HI</b>  | Provides highest level of fuel savings   |

## SYSTEM STARTUP

At initial start up, with the Economy Feature active, the control establishes a 145°F target temperature. To test the high limit shut-off function, the Economy Dial must be turned to OFF. Once tested, restore the Economy setting. If the heating demand is high, the target will increase over time to satisfy the heat load.

### NOTE:

- Smart DHW Priority: During a call from an indirect water heater, the control will de-energize the circulator contacts (C1/C2) to heat only the indirect tank ensuring an adequate supply of domestic hot water. The control will re-energize the circulator when the indirect tank is satisfied or if the boiler temperature reaches 170°F. If the indirect call continues for 45 minutes, the control will override the priority function energizing the circulator to provide space heating.

## HOW THERMAL TARGETING WORKS

Thermal Targeting technology analyzes thermostat activity and continually evaluates how much heat the house requires. When it is very cold outside, the heat demand is high and the Fuel Smart HydroStat will raise the boiler's Target temperature to provide needed heat to the home. When the outside temperature is milder, the heat demand is lower. During these periods, the Fuel Smart HydroStat will lower the boiler's Target temperature – saving fuel – while continuing to provide comfort to the house.

## RECORD YOUR SETTINGS

DATE INSTALLED \_\_\_\_\_

LOW LIMIT SETTING \_\_\_\_\_

HIGH LIMIT SETTING \_\_\_\_\_

ECONOMY SETTING \_\_\_\_\_

## OPTIONAL FEATURES

NOTE: The Program Mode – **Pro** – is accessed by turning the LO TEMP dial to a position just above OFF.

### Thermal Pre-Purge

Thermal Pre-Purge is designed to maximize boiler efficiency. When activated, the control will supply latent heat that may remain in the boiler from a previous run cycle to the next heating zone that calls. The control monitors how quickly the boiler temperature is declining and activates the burner only when it determines that the latent heat is insufficient to satisfy the call. During the purge cycle, the display will indicate **Pur**. This feature works with single-zone and multi-zone heating systems utilizing circulators or zone valves. No change in wiring is needed.

#### **To activate Thermal Pre-Purge**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **1**
3. Push the Test/Settings Button to turn Thermal Pre-Purge **On** or **Off**
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

MORE OPTIONAL FEATURES ON NEXT PAGE

## OPTIONAL FEATURES continued

### Degrees Fahrenheit or Celsius

The control has the ability to operate in degrees Fahrenheit or Celsius. When operating in Celsius, a **c** will appear in the display next to the temperature whenever the temperature is below 100 degrees.

#### **To change between degrees Fahrenheit and degrees Celsius**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **2**
3. Push the Test/Settings Button to **c** for Celsius or **F** for Fahrenheit
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

### Manual Reset Low Water Cut-Off

The low water cut-off operation on the HydroStat can be set to operate in automatic (default) or manual reset mode. When in manual reset mode, the control will shut-down the burner immediately when a low water condition is detected. If the low water condition is sustained for 30 seconds, the low water light will blink, indicating that the control has locked out the burner. The control can only be reset by pushing the Test Settings button on the top of the control. The manual reset feature meets CSD-1 code requirements.

#### **WARNING**

**Thermal Shock Warning:** To avoid Thermal Shock, allow the boiler to fully cool before adding water.  
**Resuming operation:** The heating system must be checked by a qualified service technician prior to resuming operation.  
Failure to follow these warnings can result in severe appliance damage, explosion, injury, or death.

#### **To activate Manual Reset LWCO mode**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **3**
3. Push the Test/Settings Button to **A** for Automatic Reset Mode or **B** for Manual Reset Mode
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

**To Test the Manual Reset Feature:** Press and hold the Test/Settings button located on the top of the control for 30 seconds to simulate a low water condition. After 30 seconds, the Low Water light will blink indicating that the control is locked out. To reset the lock-out condition, press the Test/Settings button momentarily.

### Circulator Activation Options

When in the default mode, the HydroStat activates the circulator (**C1/C2** contacts) on calls to **T/TV**. The control can be programmed to activate the circulator on calls to **I1/I2** in place of, or in addition to, calls to **T/TV**.

#### **To change how the Circulator is activated**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **4**
3. Push the Test/Settings Button to select between the following options:
  - A** - Circulator on **T/TV** call only
  - B** - Circulator on **I1/I2** call only
  - C** - Circulator on both **T/TV & I1/I2** calls
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

MORE OPTIONAL FEATURES ON NEXT PAGE

## OPTIONAL FEATURES continued

### Circulator Hold Off (Enhanced Condensing Protection)

To reduce the potential for condensing, on a call for heat the control will allow the boiler to heat to 125°F prior to energizing the circulator. Once energized, the circulator will remain on for the duration of the heating call unless the boiler temperature drops below 115°F. If this occurs, the circulator will re-energize when the boiler returns to 125°F. The blue LED above the vent damper plug will light to indicate the control is in “circulator hold off” mode. Circulator Hold Off will expire after 15 minutes.

#### **To activate Circulator Hold Off**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **5**
3. Push the Test/Settings Button to turn Circulator Hold Off on or **OFF**
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

### Low Limit Setting

The low limit temperature setting is designed for boilers equipped with tankless coils. When set, the control will operate the burner to maintain the set point temperature in the boiler at all times. This setting should be turned to OFF (fully counterclockwise) when the boiler does not have a tankless coil. This optional program feature provides for disabling the low limit dial so that it cannot be turned on inadvertently. Use the instructions below to deactivate or reactivate the low limit dial functionality.

#### **To disable the Low Limit Setting**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **7**
3. Push the Test/Settings Button to turn Low Limit Function to **ON** or **OFF**
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

### Setting the Well Type

When used to replace older temperature-only controls, the HydroStat can be installed on the existing well. (The Hydrolevel Electro-Well is required to activate low water cut-off operation – see page 2 for details). Older wells may contain hardened heat transfer grease or other contaminants that could interfere with metal-to-metal continuity between the sensor head and the inside of the well. Insufficient contact could lead to false low water conditions and burner shut downs. Setting the well type to Standard Well prevents the possibility of this occurring.

#### **To change the well type**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **8**
3. Push the Test/Settings Button to select **A** for Electro-Well or **b** for Standard Well.

NOTE: To ensure that the low water cut-off is always active when the control is installed on an Electro-Well, setting b will ONLY be available when installed on a standard well. The Hydrostat sensor checks to determine if a standard well is used by looking for low resistance to ground, a condition that can only exist with a standard well. If you are installing on a standard well and either Low Water LED's are on, setting b will not be available. Check to see if the inside of the well tube is badly oxidized or contaminated with heat transfer grease. It may be necessary to clean the well to allow for setting b to be selected (See Troubleshooting Guide on page 12 for more information).

RESTORING FACTORY DEFAULT SETTINGS ON NEXT PAGE

## OPTIONAL FEATURES continued

### High Limit Differential

When the Economy feature is on, the control's Thermal Targeting feature actively sets varying differentials based on system conditions. This option allows for selecting a 10, 20 or 30 degree fixed differential when the Economy feature is turned OFF. These optional differential settings are subtractive from the HIGH LIMIT setting. **Note:** If the Economy feature is on, this setting will be overridden by the control's Thermal Targeting function.

#### **To change the high limit differential**

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **9**
3. Push the Test/Settings Button to select a high limit differential of **10, 20, or 30**
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

### Restore Factory Default Settings

#### **To restore all features to the factory default settings (see following chart for default settings)**


1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as **Pro**
2. Turn the HI TEMP dial to select feature **def**
3. Push the Test/Settings Button to **4** to reset all features to the default settings.
4. Reset LO TEMP and HI TEMP settings to desired temperatures (see page 6)

| Dial Setting | Feature                              | Options                             | Description   | Default Setting |
|--------------|--------------------------------------|-------------------------------------|---|-----------------|
| <b>1</b>     | Thermal Pre-Purge                    | <b>OFF</b><br><b>ON</b>             | Purge Inactive<br>Purge Active  | <b>OFF</b>      |
| <b>2</b>     | Fahrenheit or Celsius                | <b>F</b><br><b>C</b>                | Degrees Fahrenheit<br>Degrees Celsius   | <b>F</b>        |
| <b>3</b>     | LWCO Manual or Automatic Reset       | <b>A</b><br><b>b</b>                | Automatic Reset<br>Manual Reset   | <b>A</b>        |
| <b>4</b>     | Circulator Options                   | <b>A</b><br><b>b</b><br><b>c</b>    | Circulator operation on TT call only<br>Circulator operation on ZC/ZR call only<br>Circulator operation on call from either | <b>A</b>        |
| <b>5</b>     | Circulator Hold Off                  | <b>ON</b><br><b>OFF</b>             | Circulator Hold Off – Active<br>Circulator Hold Off – Inactive  | <b>ON</b>       |
| <b>6</b>     | <i>Not available on this control</i> |                                     |   |                 |
| <b>7</b>     | Low Limit Dial                       | <b>ON</b><br><b>OFF</b>             | Low Limit Dial – Functional<br>Low Limit Dial – Disabled  | <b>ON</b>       |
| <b>8</b>     | Well Type                            | <b>A</b><br><b>b</b>                | Hydrolevel Electro-Well<br>Standard Immersion Well  | <b>A</b>        |
| <b>9</b>     | High Limit Differential              | <b>10</b><br><b>20</b><br><b>30</b> | 10° Differential<br>20° Differential<br>30° Differential  | <b>10</b>       |
| <b>def</b>   | Restore Factory Defaults             | <b>Y</b><br><b>n</b>                | Restore Defaults<br>Do Not Restore Defaults   | <b>n</b>        |

NOTE: If the HydroStat is factory-equipped on a boiler, some options may be set differently from the default settings.  
Not all features are available on older HydroStat models.

**SEE PAGE 6 F OR ADDITIONAL SETTINGS**

## LED LEGEND and TEST/SETTINGS BUTTON

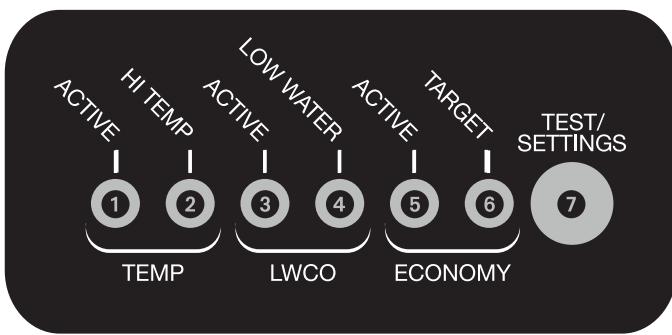

**1 TEMP ACTIVE** Indicates that the Fuel Smart HydroStat control is powered and that the temperature function is active.

**2 TEMP HI TEMP** Illuminates when the boiler water temperature reaches the high limit setting. It will remain lit until the water temperature falls 10°. The Fuel Smart HydroStat prevents burner operation while this LED is on. See Differential explanation on page 6.

**3 LWCO ACTIVE** Indicates that the low water cut-off (LWCO) function of the Fuel Smart HydroStat is active. When the control is installed with a Hydrolevel Electro-Well, this LED will be on at all times when the control is powered.

**IMPORTANT:** If the control is installed with a well other than the Electro-Well, this LED will not illuminate indicating that the control is not providing low water cut-off functionality.

**4 LWCO LOW WATER** Indicates that the boiler is in a low water condition. The HydroStat control will prevent burner operation during this condition. If the LOW WATER light is blinking, the control has been programmed to provide lock-out protection in the event a low water condition is detected (see Manual Reset Low Water Cut-Off on page 8). Pressing the TEST/SETTINGS button will reset the control.

**IMPORTANT:** The system must be checked by a qualified heating professional prior to resuming operation.

**WARNING: ALLOW THE BOILER TO FULLY COOL BEFORE ADDING WATER.**

**5 ECONOMY ACTIVE** Indicates that the Thermal Targeting function is active and the Fuel Smart HydroStat will reduce boiler temperature to conserve fuel. The Economy feature is activated using the ECONOMY dial. (See "How Thermal Targeting Works" on page 7 for more information).

**6 ECONOMY TARGET** When the Economy feature is active, the Fuel Smart HydroStat continually sets target temperatures below the high limit setting to maximize fuel efficiency. When the boiler water reaches the target temperature, the LED illuminates and the burner will shut down. The boiler water will continue to circulate and heat the house as long as the thermostat call continues. The LED will stay lit until the boiler temperature drops below the differential set point at which point the boiler will be allowed to fire again. See Differential explanation on page 6.

**NOTE:** This LED illuminates regularly during normal boiler operation.

### 7 TEST/SETTINGS Button

**To Test Low Water Cut-Off:** Press and hold the Test/Settings button for 5 seconds. The display will read LCO.

**LWCO TEST LCO**

The red Low Water light should illuminate and the burner circuit (B1 and B2) should de-energize. **NOTE:** The control must be installed with a Hydrolevel Electro-Well for low water cut-off functionality (see page 2 for more details).

**To View Current Settings:** Press and release the Test/Settings Button in short intervals to sequentially display the following settings:


**HIGH LIMIT SETTING HL**

**LOW LIMIT SETTING LL**

**ECONOMY SETTING ECO**

**CURRENT TARGET TEMPERATURE 000**

The display will return to boiler temperature (default) if Test/Settings Button is not pressed for 5 seconds.

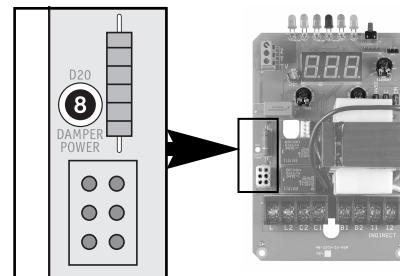

### 8 DAMPER POWER LED

Indicates the control is energizing the vent damper. For applications where the vent damper is not plugged into the HydroStat, the LED indicates that the burner circuit (B1 - B2) is powered.


If this LED is on and the burner is not firing:

1. Make sure the plug connection (or jumper, on boilers where vent damper plug is not used) is secure.
2. Make sure that the plug connection at the vent damper end is secure and oriented correctly.
3. Make sure damper motor turns
4. Verify the damper end switch has closed

**DANGER** **Carbon Monoxide Hazard:** If the burner fires when the vent damper is not fully opened or there is any other blockage in the flue, dangerous flue products, such as carbon monoxide, will escape into the living space causing severe personal injury or death. The flue as well as the vent damper must be checked for proper operation before allowing the system to operate.

### 9 Circ Delay LED

The blue "circ delay" LED lights to indicate the heating circulator (terminal C1) is being held off. See Circulator Hold Off (option 5) top of page 9 for more information.

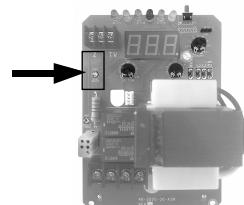

## TROUBLESHOOTING

|   |   |
|---|---|
| <b>Burner Will Not Shut Down</b>                                    | See Flow Chart 1, page 13   |
| <b>Burner Will Not Fire</b>   | See Flow Chart 2, page 14   |
| <b>Temperature Display Exceeds High Limit Setting</b>               | Under normal operation, boiler temperature will continue to rise after the control shuts off the burner. This condition, known as “thermal stacking”, results from hot boiler surfaces continuing to release heat into the boiler water.  |
| <b>No or Insufficient Domestic Hot Water</b>                        | For boilers equipped with a tankless coil, make sure the low limit setting on the Hydro-Stat is set properly. <b>NOTE:</b> If the low limit setting is dialed fully counter clockwise, it will shut off the low temperature maintenance feature and will function as a cold start control. If installed with an indirect water heater, check that the Zone/Indirect Switch is set in the Indirect (I) position. Verify that the end switch in the relay box controlling the indirect water heater is connected to the <b>11-12</b> terminals. This will ensure that the domestic water calls are prioritized. (see “Heating and Indirect Water Heater” on page 5).  |
| <b>Low Water Light (Red LED) is On or Blinking</b>                  | <p><b>WARNING</b> A low water condition is serious and potentially dangerous. To avoid Thermal Shock, allow the boiler to fully cool before adding water. Failure to do so can result in severe appliance damage, explosion, injury or death.</p> <p><b>When Installed on an Electro-Well™</b></p> <p>When the LOW WATER light is on, this indicates that the control is not detecting water in the boiler. When the LOW WATER light is blinking, this indicates that the control has been programmed to provide low water lock-out protection and is currently locked out (see Manual Reset Low Water Cut-Off on page 8). Pressing the TEST/SETTINGS button after the low water condition is resolved will reset the lock-out condition.</p> <ol style="list-style-type: none"> <li>1. If the light is on and the heating system is filled with water, pull the sensor out of the well and inspect it. Make sure that the metal clip is protruding enough to come in contact with the inside of the well tube. Check that the well does not have excessive build-up of heat transfer grease that may interfere with the clip contacting the well.</li> <li>2. Remove well and examine for excessive residue build-up. Clean and re-install.</li> </ol> <p><b>When Installed on a Standard Immersion Well</b></p> <p>If either LWCO LED lights are illuminated and the control is installed on a standard immersion well, this is a false reading caused by a loss of continuity between the sensor and the inside of the well tube. Follow steps 1 and 2 (above) to ensure that the metal sensor head is making good contact with the inside surface of the copper well.</p> |
| <b>Boiler Will Not Maintain Low Limit Temperature</b>               | Check for overlapping high temperature setting. If the high limit setting is set below the low limit setting, the control will default to the high limit setting and the corresponding high limit differential setting.   |
| <b>House Will Not Get or Stay Warm</b>                              | <ol style="list-style-type: none"> <li>1. Check for air-bound radiators.</li> <li>2. Check thermostat settings including heat anticipator settings (common on non-digital thermostats).</li> <li>3. Check the Economy setting. The Economy feature, much like outdoor reset controls, lowers average boiler temperature and can slow or, in some cases, prevent the house from coming up to temperature. Move to a lower setting (see “Setting the Economy Feature” on page 6).</li> </ol>  |
| <b>Circulator Contacts C1 and C2 Not Energized on Call for Heat</b> | Check to see that boiler water is at or above 125°F. On a call for heat, the control will not permit the circulator to operate if the boiler water temperature is below 125°F (see “Circulator Hold Off” on page 9).  |
| <b>All LED Lights and Temp Display are Blinking</b>                 | If the LED lights and the temp display are blinking alternately, this indicates the control has sensed a boiler temperature of 250°F. When this occurs, the control pulses the burner relay and then shuts down and locks-out the burner. The system should be analyzed to determine the cause of the overheating condition. Check that the sensor is inserted all the way into the well so it can accurately sense the temperature of the boiler water. Check the load on the burner contacts: If the load exceeds the 7.4 Amp rating, the contacts may have welded. Correct the overloading condition and replace the control before reenergizing the system. If the load on the contacts is below the rating, check system wiring and operation as well as the control’s high limit setting. If the cause of the overheating is found and the system is deemed safe, the control can be reset by removing power from the control and then re-powering while simultaneously pressing the Test/Settings button on the top of the control. If the cause of the overheating condition is not determined, the control should be replaced.   |
| <b>50F in Display</b>   | Check sensor connection or replace sensor.  |
| <b>Temperature Display Flickering</b>                               | Confirm proper grounding of control (see page 4)  |
| <b>Control Continually Resets</b>                                   | Confirm proper grounding of control (see page 4)  |


## TROUBLESHOOTING (continued)

**If any apply —**


- LCD screen and all LEDs will not light up
- Circuit board gets wet or if there is visible damage to the circuit board
- 8 or 888 in display and burner will not fire

Replace control

### Troubleshooting Flow Chart 1 – Burner Will Not Shut Down

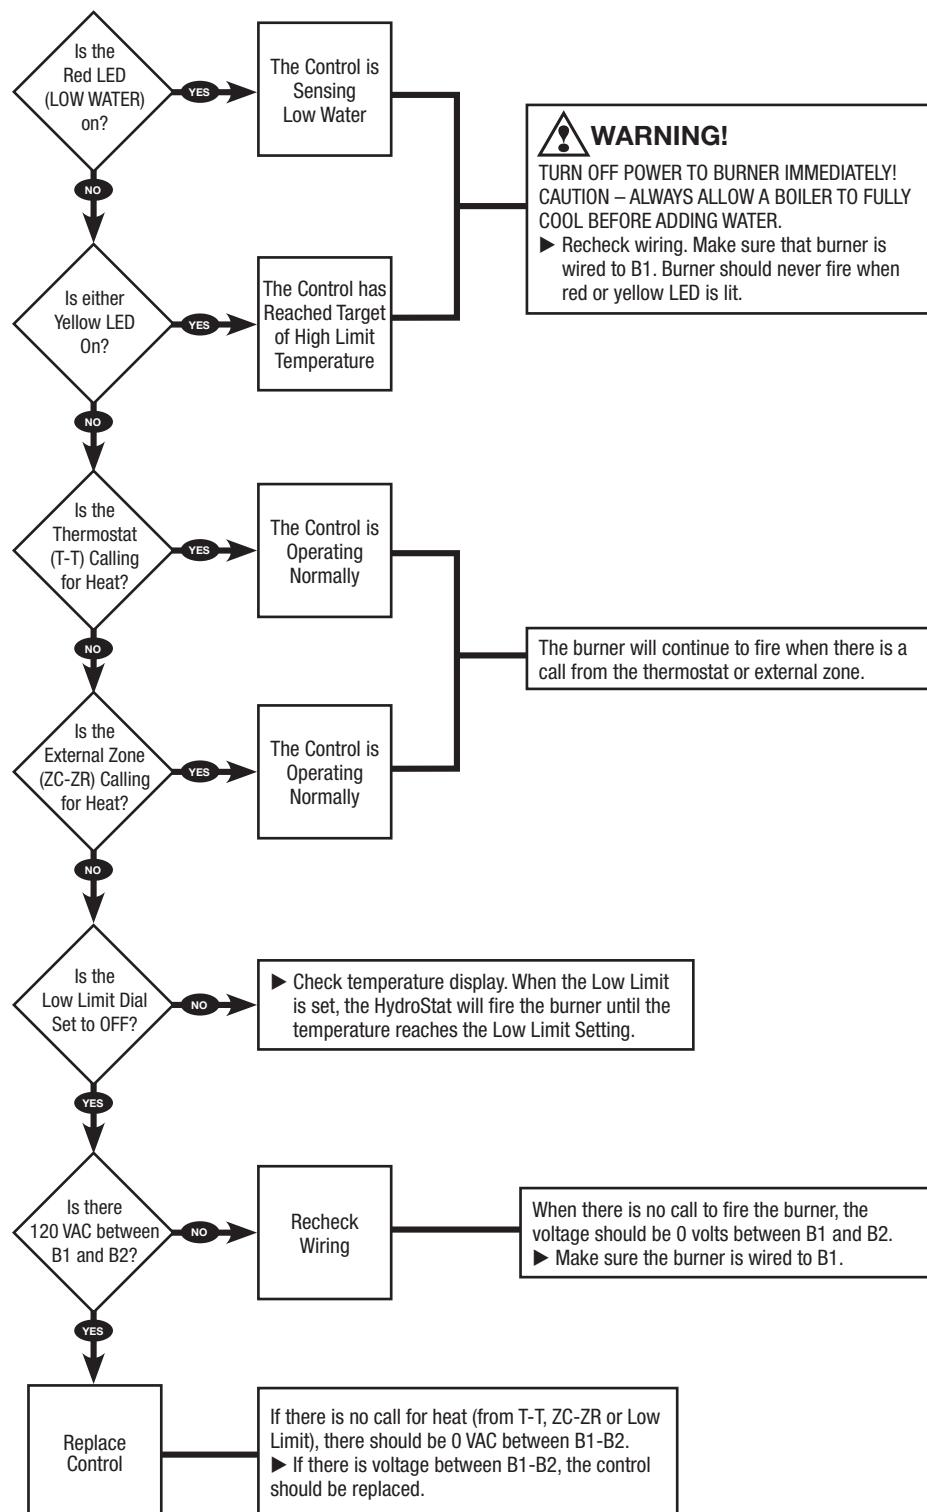

## Troubleshooting Flow Chart 2 – Burner Will Not Fire

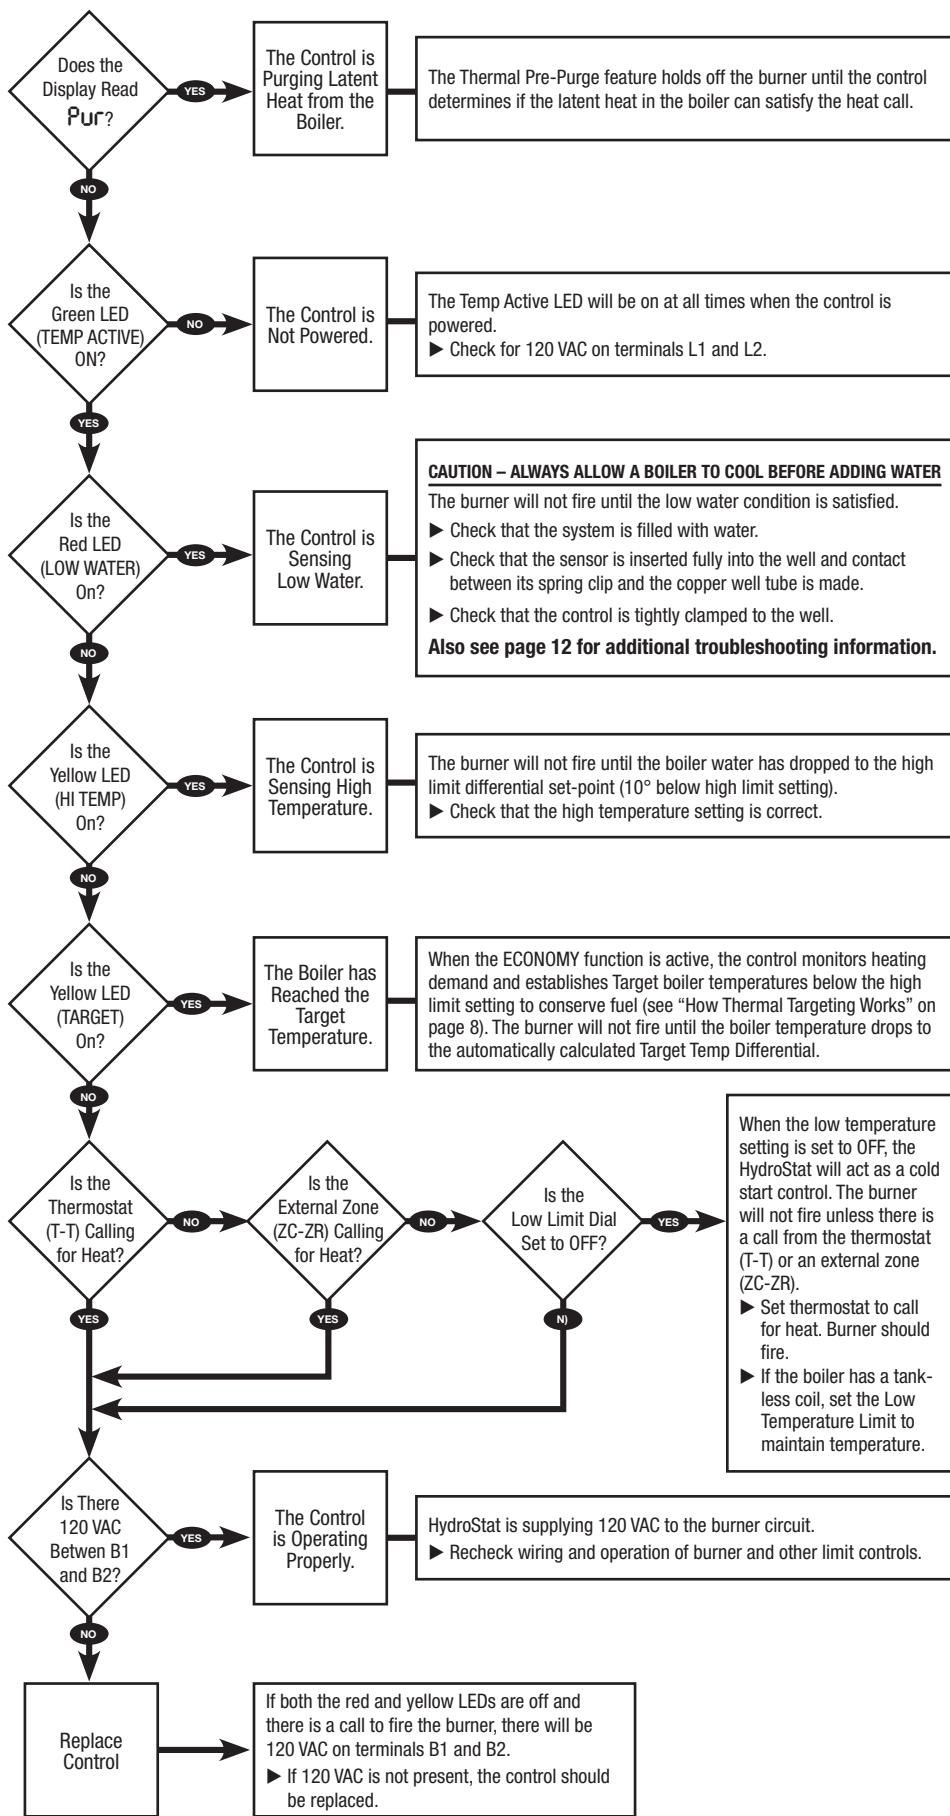



## MAINTENANCE

Remove the Electro-Well™ from the heating system every five years and clean any scale or sediment deposits from all parts that are exposed to the boiler water. After cleaning, reinstall the well using pipe sealing compound. Teflon tape is not recommended.

## ELECTRO-WELLS™


### Fuel Smart HydroStat installed with Electro-Well™

When installed with the Hydrolevel Electro-Well™, Fuel Smart HydroStat will provide both temperature and low water cut-off functionality. If the control was supplied by the boiler manufacturer, it was installed with an Electro-Well™. The Electro-Well™ is available separately for field installations.

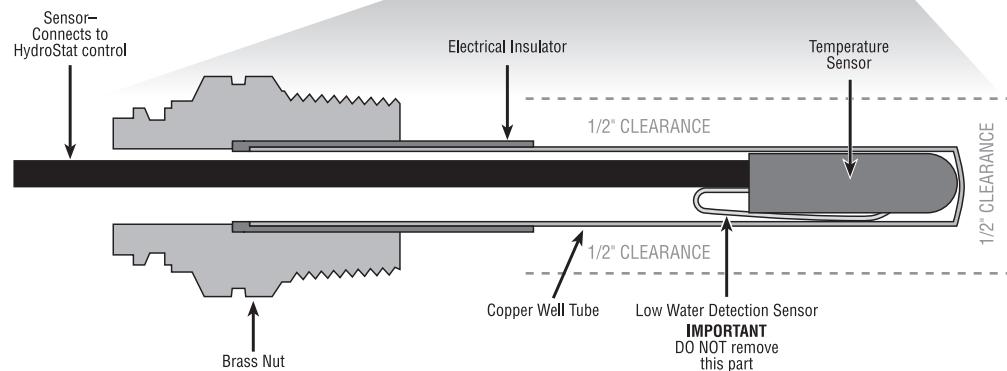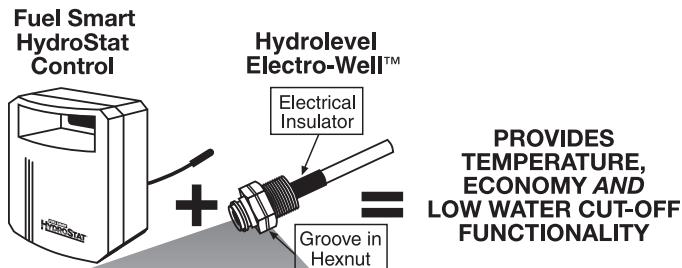

**IMPORTANT:**  
For proper operation of the low water cut-off function, there must be a minimum of  $\frac{1}{2}$ " clearance between the copper well tube and any surface within the boiler.

### Electro-Well™ Models

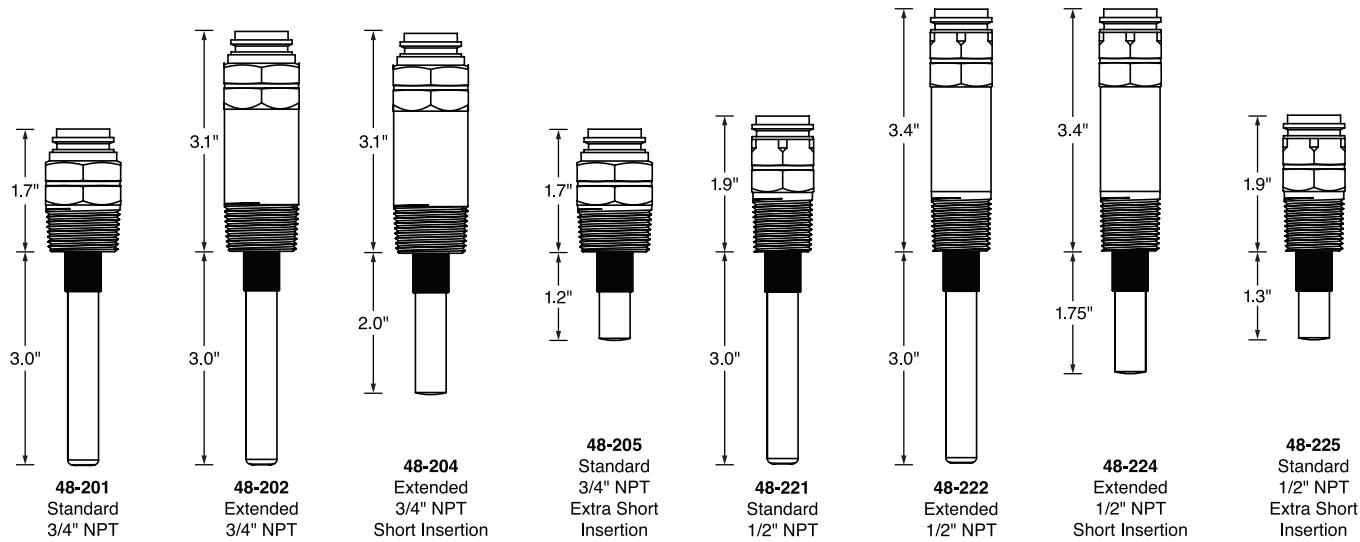

## OUTDOOR SENSOR KITS

Hydrolevel's optional Outdoor Sensor Kits automatically activate outdoor reset functionality and warm weather shutdown capability when plugged into the Fuel Smart HydroStat control. These kits are available separately at Hydrolevel distributors.

| Part No.      | Description                              |
|---------------|--|
| <b>48-140</b> | Model OS-100 Outdoor Sensor Kit          |
| <b>48-145</b> | Model OS-200 Wireless Outdoor Sensor Kit |




Model OS-100



Model OS-200

## DIMENSIONS

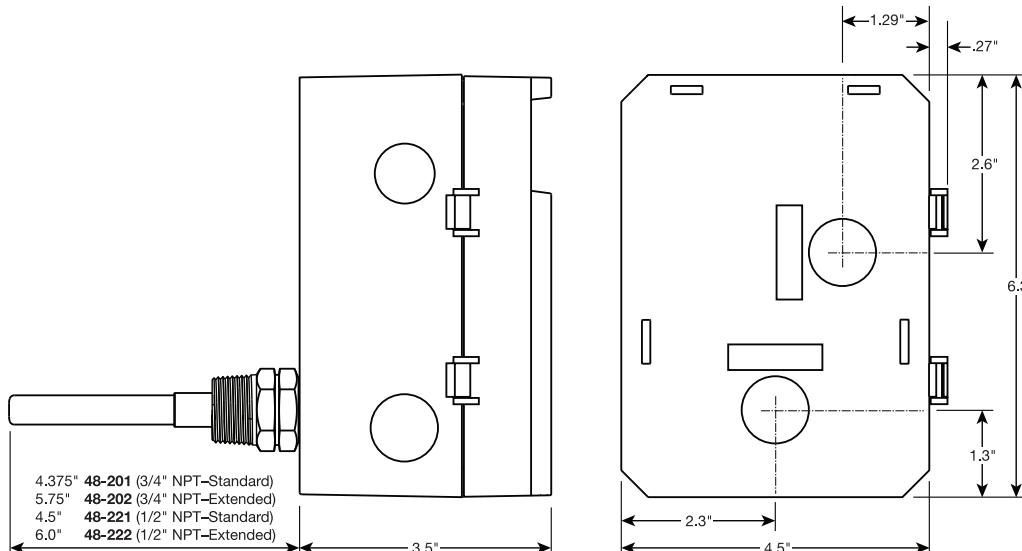

## SPECIFICATIONS FUEL SMART HYDROSTAT MODEL 3200-Plus

|                                     |                                    |
|-------------------------------------|------------------------------------|
| Input voltage                       | 120 VAC, 60 HZ                     |
| Burner contacts                     | 7.4 FLA, 44.4 LRA@120 VAC          |
| Circulator contacts                 | 5.8 FLA, 34.8 LRA@120 VAC          |
| Operating range – low limit         | Off or 110°F (43°C) - 200°F (93°C) |
| Operating range – high limit        | 100°F (38°C) - 220°F (104°C)       |
| Operating range – differentials     | Automatic                          |
| Thermostat heat anticipator setting | 0.2A                               |



Proudly  
assembled  
in the USA  
from domestic  
and global  
components.

## LIMITED MANUFACTURER'S WARRANTY

We warrant products manufactured by Hydrolevel Company to be free from defects in material and workmanship for a period of two years from the date of manufacture or one year from the date of installation, whichever occurs first. In the event of any claim under this warranty or otherwise with respect to our products which is made within such period, we will, at our option, repair or replace such products or refund the purchase price paid to us by you for such products. In no event shall Hydrolevel

Company be liable for any other loss or damage, whether direct, indirect, incidental or consequential. This warranty is your EXCLUSIVE remedy and shall be IN PLACE OF any other warranty or guarantee, express or implied, including, without limitation, any warranty of MERCHANTABILITY or fitness for a particular purpose. This warranty may not be assigned or transferred and any unauthorized transfer or assignment thereof shall be void and of no force or effect.